Rollei

facebook.com/
rollei.actioncam.de

facebook.com/
rollei.actioncam.en

www.**rollei**.com

Service:
Rollei Service Germany
Denisstraße 28a
D-67663 Kaiserslautern
Hotline +49 (0)6 31/3 42 84 49

Distribution:
Rollei GmbH & Co. KG
Tarpen 40/Gebäude 7b
D-22419 Hamburg

Subject to technical changes!

Rollei

Rollei **Actioncam 310**

USER GUIDE

FOR ENGLISH | GERMAN | SPANISH | PORTUGUESE | ITALIAN
GREEK | FRENCH | DUTCH | POLISH | CZECH | HUNGARIAN
SWEDISH | FINNISH | NORWEGIAN | DANISH

THE BASICS

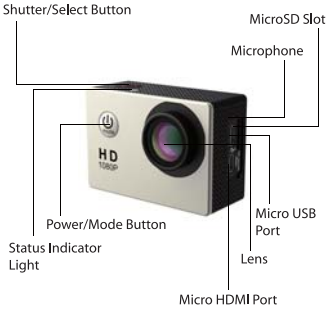

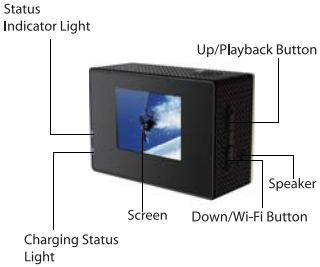

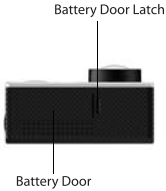

WATERPROOF HOUSING

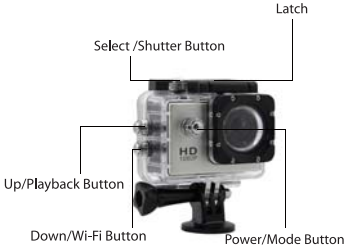

ACCESSORIES

Waterproof Housing

Handle Bar/ Pole Mount

Mount 1

Mount 2

Mount 3

Clip 1

Helmet Mounts

Bandages

Battery

USB Cable

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

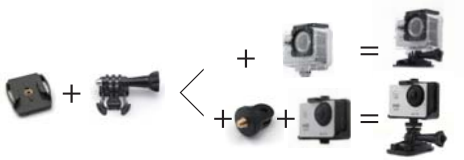

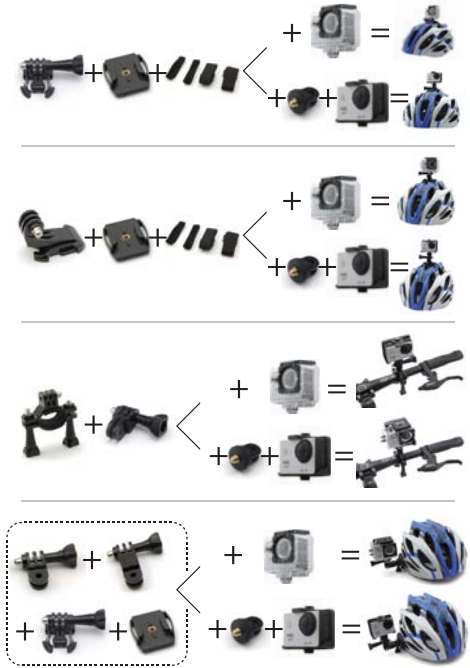

ROLLEI ACTION CAMERA 310

Before using the Rollei Actioncam 310, please ensure you read and understand the safety precautions.

- Do not attempt to open the case of the camera or modify it in any way. If the camera has been opened, the warranty will be void. Maintenance and repairs can only be performed by Rollei.
- Keep the camera away from water and other liquids (unless used in the waterproof case). Do not handle the Rollei Actioncam 310 with wet hands (unless used in the waterproof case). This may cause the camera to malfunction.
- Recharge the battery using the micro USB Connector. Any variation to voltage or current will cause the camera to fail.
- The Rollei Actioncam 310 should not be used in heat exceeding **60** ℃ (**140** ℉), or cold below **-15** ℃ (**5** ℉).
- DO NOT drop the Rollei Actioncam 310.

- Avoid placing heavy objects on the Rollei Actioncam 310.
- Do not dispose of this unit in domestic waste.

GETTING STARTED

To power ON:
Press the **Power/Mode Button**.

To power OFF:
Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings.The modes will appear in following order:

Video	Record Video
Photo	Capture a single photo.
Burst Photo	
Time Lapse	
Settings	Adjust camera settings, resolution and more.

SETTINGS

Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.
Video Resolution: 1080p 30fps/720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins
4 GB	30 mins	40 mins

Looping Video: Off/On
Time Stamp: Off/Date/Date & Time
Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0
Photo Resolution: 8M/5M/2M
Burst Photo: 3 Photos
Time Lapse: Off/2s/3s/5s/10s/20s/30s/60s
Continuous Lapse: Off/On
Power Frequency: 50Hz/60Hz/Auto
Language: English/German/Spanish/Portuguese/Italian/Greek/French/Ducth/Polish/Czech/Hugarian/Swedish/Finnish/Danish
Date & Time: MM/DD/YY, YY/MM/DD, or DD/MM/YY
Sound Indicator: Shutter On/Off, Start Up 1/2/3/None Beep On/Off, Volume 0/1/2/3
Upside Down: On/Off
Screen Saver: Off/1 min/3 mins/5 mins
Power Saver: Off/1 min/3 mins/5 mins
Format: No/Yes
Reset: No/Yes
Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button repeatedly** until it appears.

To start recording:
Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:
Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.
This camera automatically stops recording when the battery is out of power. Your **Video** will be

saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:
Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.
To take a Burst Photo series:
Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:
Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

QUICK MODES

To enter the Quick Modes menu

1. Verify the camera is in **Camera modes.**
2. Press and hold the **Shutter/Select Button** for three seconds.
3. Repeatedly press the **Power/Mode Button**

to cycle through **camera modes**.
4. Press the **Shutter/Select Button**.
5. **To exit,** hold down the **Shutter/Select Button** for three seconds.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:
1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button or Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback menu,** press the**Power/Mode Button**.
8. **To exit,** hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **4GB, 16GB,** and **32GB** capacity **microSD, microSDHC,** and **microSDXC** memory cards. You must use a **microSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:
1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn **OFF** when the battery is fully charged.

* Charging Time: 3.5 hours

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

The EC Declaration of Conformity can be requested from the address specified on the Warranty card.

Conformity

The Manufacturer hereby declares that the CE marking was applied to the Rollei Action Cam 300 in accordance with the basic requirements and other relevant provisions of the following CE Directives:

2011/65/EC RoHs Directive
2004/108/EC Low Voltage Directive
1999/5/EG R&TTE Directive
2006/95/EEC LVD Directive
2009/125/EG EuP Directive
2002/96/EG WEEE Directive

CE

The EC Declaration of Conformity can be requested from the address specified on the Warranty card.

License Statement

The software used in this product is licensed subject to a license pursuant to the GNU – General Public License conditions. We expressly draw attention to the fact that under the GNU – General Public License conditions no liability is accepted.

The starting point for the software is the software published online at

http://sg-gpl.net/

The software listed there is licensed pursuant to the GNU – General Public License conditions.

Device-related changes have been made to this software for the product in question. The source text of the software implemented in the product in question can be obtained in response to an enquiry sent to the e-mail address

info@rollei.com

In this instance your e-mail must contain details of what the relevant product is, the relevant serial number and documentary evidence of your commercial source of supply as well as documentary evidence of the date on which the product was purchased from the trade source of supply. We guarantee supply of the source text of the implemented software for a period of at least three years from date of purchase from the trade source of supply where the trade source of supply has sourced the product from us directly or via strictly trade-only dealers.